



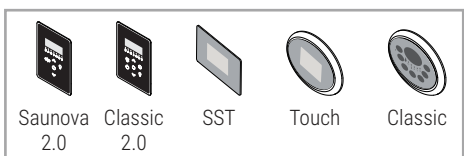


ORION HEATER - Installation Diagram for Separate Control (NS)

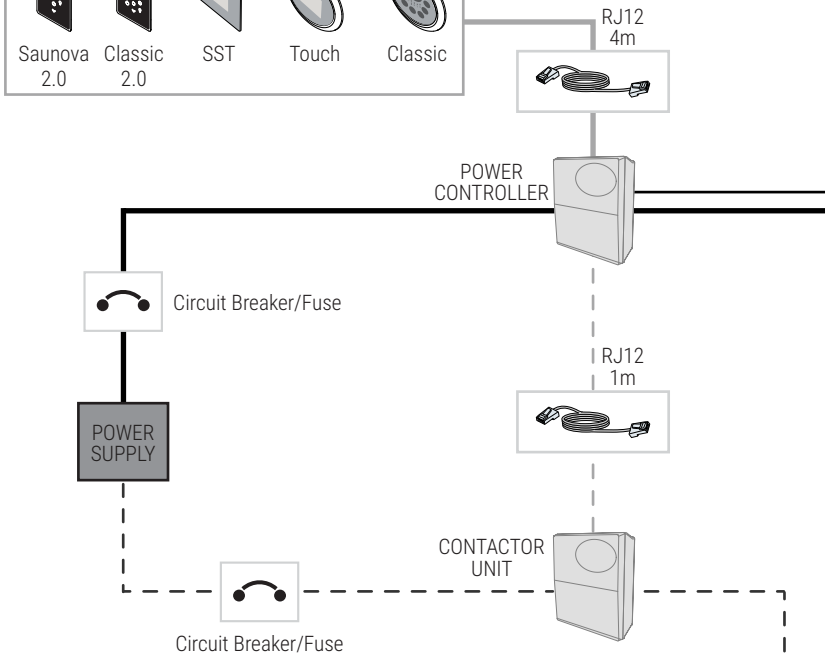

NOTE!
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.




NOTE!
Please refer to the control unit manual for maximum power rating. Check control's maximum capacity if additional contactor unit is needed.

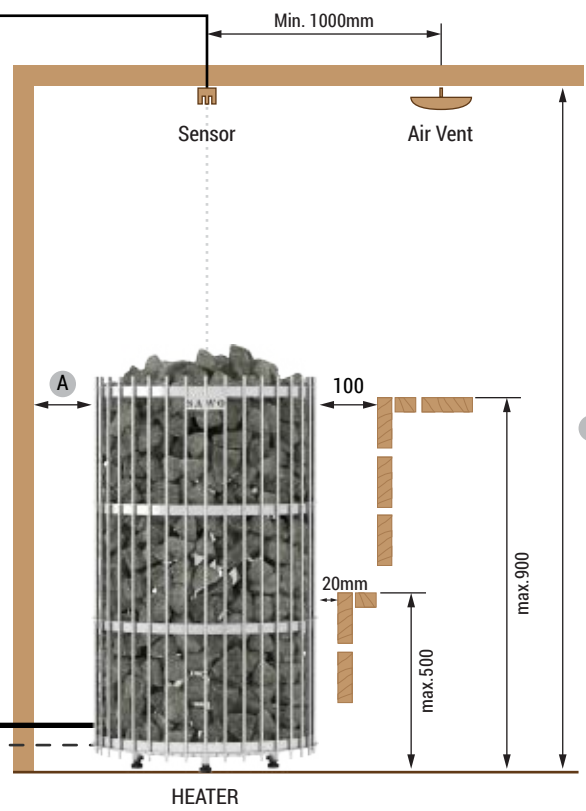

Minimum Safety Distances

Heater Model	A	B
ORN6-90NS	130	1900
ORN6-105NS	135	1900
ORN6-120NS	140	2100

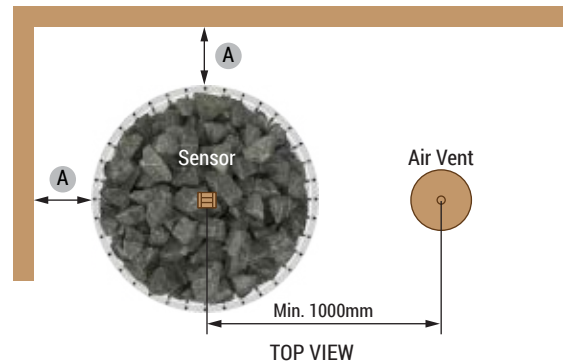

TOP VIEW